



	CD MODE	TU MODE	AV/DVD MODE	AV-S/DVD MODE	SETUP MODE
1	Power off all systems				
2	<b>CD, TU or AV MODE SELECT</b> - CD8x, Tuner or DVD power on - Stereo amplifier CD, TU or AV input select.				
3	<b>AV SURROUND MODE SELECT</b> - DVD and Surround decoder power on.				
4	Stereo amplifier input select.	Stereo amplifier input select.	Stereo amplifier input select.	Surround decoder input select.	Surround decoder input select.
5	Stereo amplifier balance select.	Stereo amplifier balance select.	Stereo amplifier balance select.	-	-
6	Stereo amplifier volume control.	Stereo amplifier volume control.	Stereo amplifier volume control.	Surround decoder volume control.	Surround decoder volume control.
7	Stereo amplifier mute.	Stereo amplifier mute.	Stereo amplifier mute.	Surround decoder mute.	Surround decoder mute.
8	CD8x display mode.	-	DVD quick access zoom.	DVD quick access zoom.	-
9	CD8x audio phase invert.	-	DVD quick access angle.	DVD quick access angle.	-
10	CD8x next/previous track.	Tuner next/previous preset.	DVD next/previous chapter/title.	DVD next/previous chapter/title.	-
11	CD8x next track.	Tuner next preset.	DVD cursor up.	DVD cursor up.	-
12	CD8x search forward.	Tuner scan up.	DVD cursor right.	DVD cursor right.	Adj +
13	CD8x previous track.	Tuner previous preset.	DVD cursor down.	DVD cursor down.	-
14	CD8x search reverse.	Tuner scan down.	DVD cursor left.	DVD cursor left.	Adj -
15	-	-	DVD OK.	DVD OK.	Adj exit.
16	CD8x display off.	Tuner display off.	DVD display off.	DVD display off.	Surround decoder display off*.
17	CD8x play/pause/stop.	-	DVD play/pause/stop.	DVD play/pause/stop.	-
18	CD8x track select.	Tuner preset select.	DVD chapter/title select.	DVD chapter/title select.	Surround decoder speaker and subwoofer setup.
19	CD8x track memory store.	Tuner preset store.	-	-	-
20	-	-	DVD chapter/title mode.	DVD chapter/title mode.	-
21	-	-	DVD OSD activate.	DVD OSD activate.	-
22	-	-	DVD menu select.	DVD menu select.	-
23	<b>AV SETUP MODE SELECT</b> - Surround decoder power on.				
24	-	-	-	-	Surround decoder mode setup.
25	-	-	-	-	Surround decoder noise setup.
26	-	Tuner stereo/mono.	-	Surround decoder stereo mode select.	Surround decoder input setup.

\* Decoder may require optional software upgrade to activate this feature.